



Statement



I N T E G R A T E D A M P L I F I E R

P R O D U C T M A N U A L





LSA *Statement* Integrated Amplifier

Thank you for selecting the LSA *Statement* Integrated Amplifier!

To ensure your most complete satisfaction, please read this manual and keep it in a safe place for future reference.

LSA *Statement* Integrated Amplifier



Contents:

| | |
|----------------------|----|
| Main Features | 1 |
| Safety Instructions | 2 |
| Supplied Accessories | 3 |
| Front Panel | 4 |
| Rear Panel | 5 |
| Basic Connection | 6 |
| Phono Connection | 7 |
| Basic Operation | 8 |
| Note from LSA | 9 |
| Specifications | 10 |
| Warranty | 11 |

L S A *Statement* Integrated Amplifier



Main Features:

- No compromise, high current, high fidelity design
- 100% Quality Control via multi-point inspection
- Integration of advanced vacuum tube and solid state technologies
- Exhaustive application of Active Tube Load proprietary circuitry
- Powerful twin toroidal transformers
- True dual mono topography for superb stereo separation
- Built-in quality phono stage (Moving Magnet)
- Variable Preamp Output
- Integrated/Power Amp modes via toggle switch
- Safety protection circuit
- Remote control
- Five year warranty

L S A *Statement* Integrated Amplifier



Safety Instructions:

- Place the unit in a cool, clean, dry place and allow generous space for ventilation.
- Avoid direct sunlight, vibration, dust, extreme heat or cold, and chemical solvents.
- Keep unit away from other electrical appliances, motors or transformers.
- Avoid any source of water or moisture, which can cause electrical shock or fires.
- Clean unit with a clean, dry cloth as chemical solvents can damage the finish.
- Avoid extreme temperatures changes, which cause damaging condensation.
- Do not place objects directly on the unit or in any way block ventilation.
- Connect all associated equipment properly before connecting AC power supply.
- Do not force switches, controls or knobs.
- Disconnect the AC power supply during electrical storms or for extended disuse.
- Grasp the power plug when disconnecting AC — never pull by the wire.
- It is dangerous to use any other voltage than that which is specified for this unit. Such use can cause fire, damage, personal injury and will void the warranty.
- The inside of this unit contains high voltages which can cause injury or death. Never open the top plate or attempt to fix or modify. Always consult a qualified technician if there is reason to believe the unit needs repair service.


L S A *Statement* Integrated Amplifier



Supplied Accessories

Please check for the following items:


- 1 remote control
- 2 batteries for remote control (AAA, UM-4, RO3)
- 2 phono jumper pins
- 1 power cord
- 1 manual

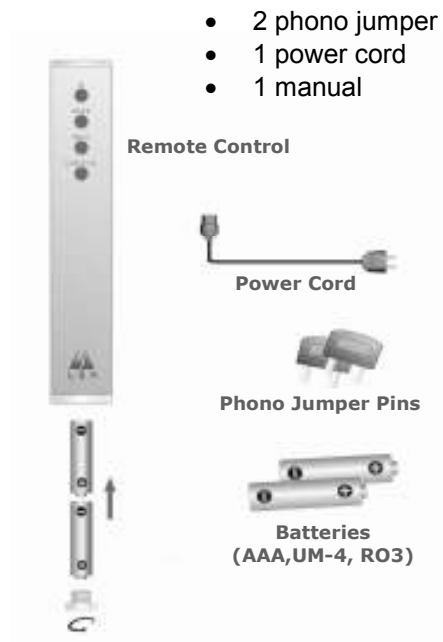

L S A *Statement* Integrated Amplifier



Front Panel

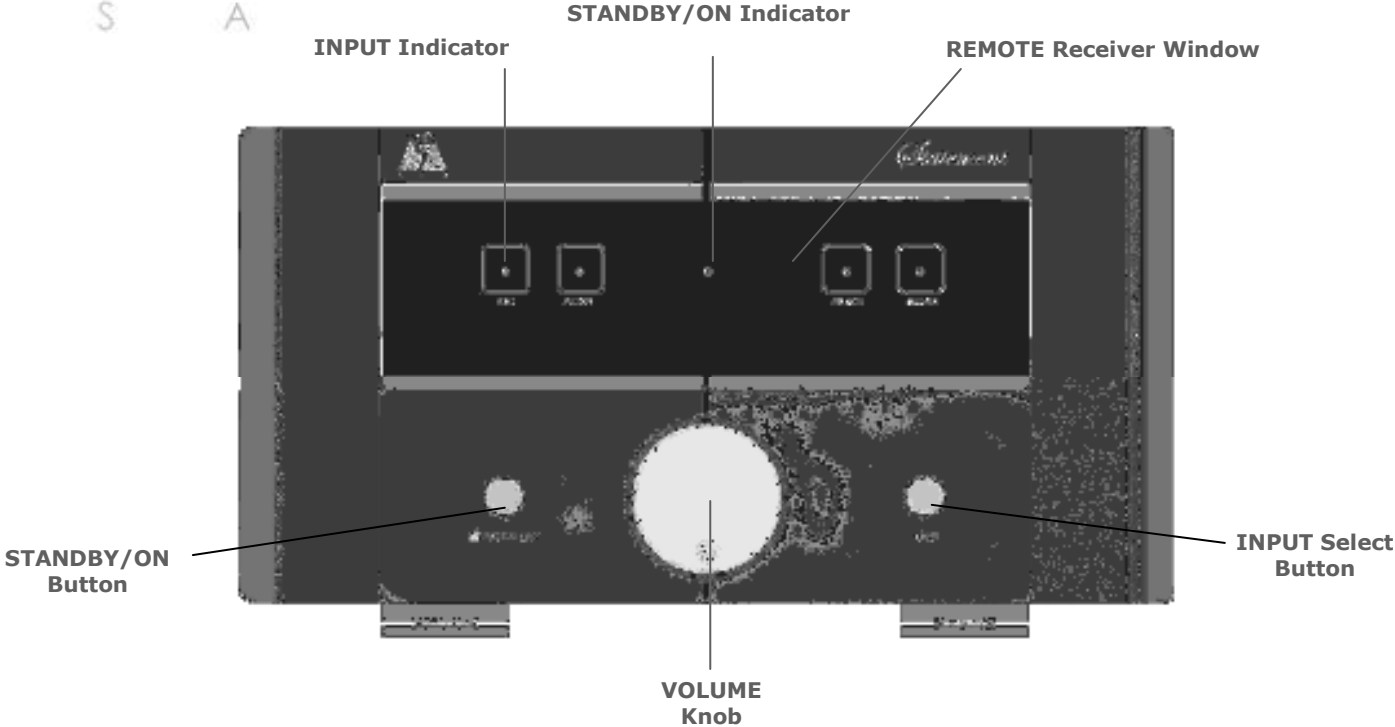

Note:

Make
turnin
STAN
the m

L S A *Statement* Integrated Amplifier




Rear Panel:

1. AC power input
 2. POWER ON/OFF
 3. LINE OUT
 4. AUX1, AUX2, AUX3 INPUTS
 5. BALANCED INPUT
 6. PHONO GROUND
 7. PHONO INPUT
 8. PHONO OUTPUT
 9. SPEAKER OUT (right)
 10. SPEAKER OUT (left)
- A. POWER AMP INPUT B. INT/EXT PREAMP SWITCH*

Note:

Make all connections before turning on the power. Engage STANDBY before turning off the master switch

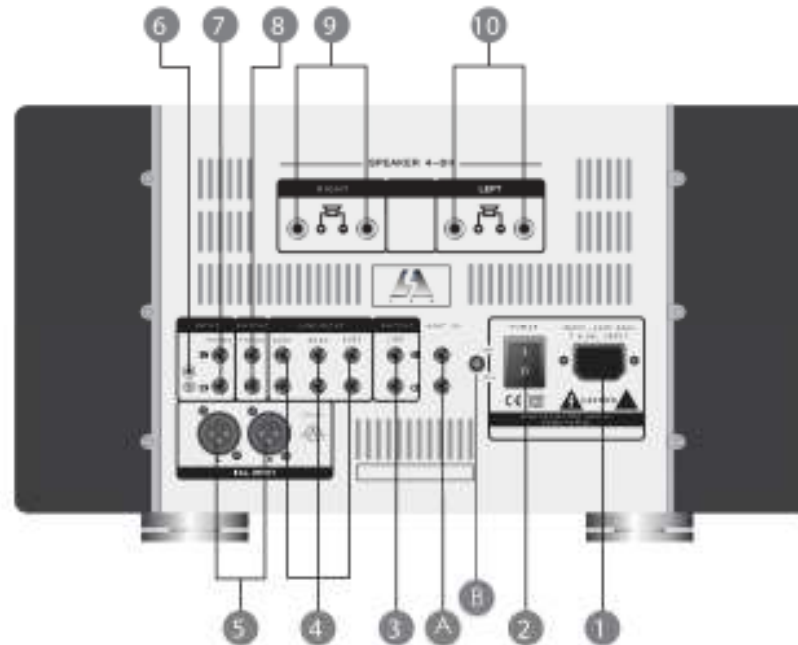


*Toggle switch to up position for integrated amp use. Toggle down to connect external preamp to power amp input.

L S A *Statement* Integrated Amplifier



Connections

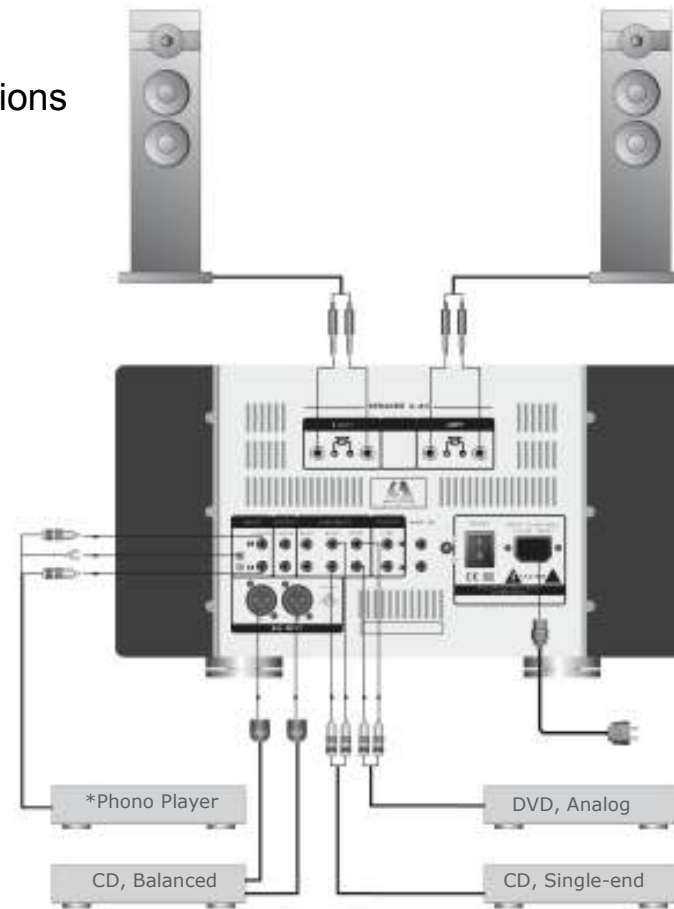

*Note:


Phono Jumper Pins
(supplied) are needed
to connect a turntable.



LSA *Statement* Integrated Amplifier

Phono Connection

To use a turntable, plug the two jumper pins (supplied), connecting the phono output with the nearest pre-amp input. For best sound quality, we recommend using a set of quality interconnect cables as jumpers. The phono output can then be plugged into any set of pre-amp inputs.

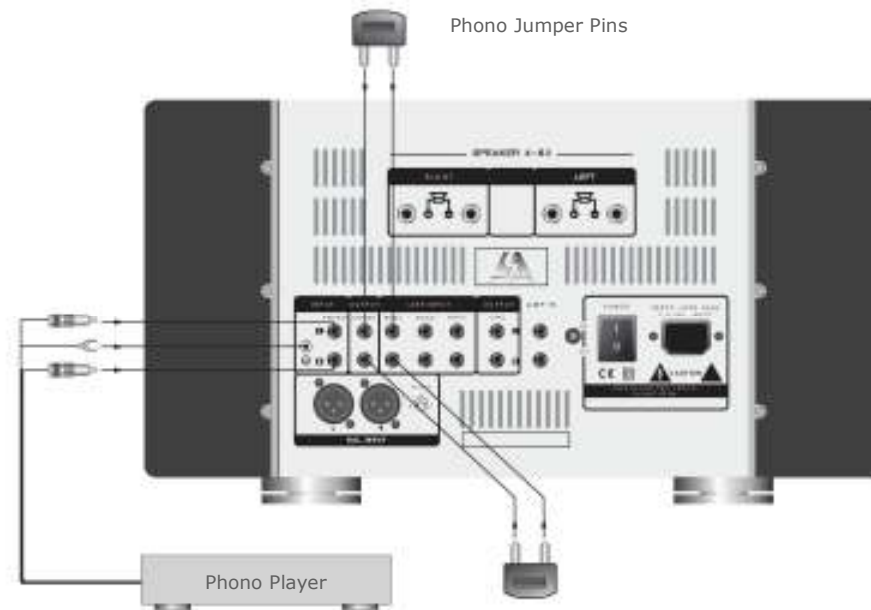

L S A *Statement* Integrated Amplifier



Basic Operation:

1. Power on amplifier (standby indicator LED will turn off for several seconds during warmup).
2. Select Input
3. Adjust volume

* These functions are also available on the remote control



LSA *Statement* Integrated Amplifier

Dear Music Lover,

Thank you for choosing LSA to bring music to life again in your home. Within this integrated amplifier is a unique technological union of vacuum tube and solid state circuitries. We are pleased to offer you such warmth, finesse, control and reliability, traditionally believed to be available only from the most expensive separate components.

As you enjoy the sound of this fine product, please take care of your ears. It is rarely necessary to increase the volume knob beyond the ten-o'clock position, at which point it should produce robust SPL's from most speakers in most rooms. Vast power is there if you need it, but please avoid loud volumes for sustained periods so as to prevent damage to your hearing.

We at LSA want you to enjoy your recorded music for many years to come.

Warmest Regards,

A handwritten signature in black ink that reads "C. Brian Warford". The signature is written in a cursive style.

Brian Warford
LSA President

L S A *Statement* Integrated Amplifier



Technical Specifications:

| | |
|--------------------------------------|----------------------------------|
| Rated Power (RMS, 8Ω)..... | ≥150+150W |
| (RMS, 4Ω)..... | ≥300+300W |
| Total Harmonic Distortion (THD)..... | ≤0.1%(1KHz) |
| Recommended Loading Impedance..... | 4-8Ω |
| Frequency Response..... | .20HZ-32KHz(±1dB) |
| S/N Ratio..... | ≥90dB |
| Channel Separation..... | ≥60dB(1KHz) |
| Input Impedance..... | 47KΩ |
| Input Sensitivity: analog input..... | ≥1.5V |
| phono input..... | ≥4mv |
| Overload Signal Level..... | ≥2V |
| Input Terminals |1 balanced input |
| |3 analog inputs |
| |1 phono input |
| Power Supply |AC220V±10% 50Hz |
| |AC110V±10% 60Hz |
| Dimensions |430(W) x 235(H) x 480(D) mm |
| Net Weight |38kg/78lb |

LSA *Statement* Integrated Amplifier



Warranty Information

The LSA Group warrants this product to be free of manufacturing defects for five (5) years from the original date of purchase. A valid serial number and an original, dated bill of sale from an *authorized LSA Group dealer* is required for warranty coverage.

This balance of this warranty is transferable only if the used product is traded with the original bill of sale through an authorized LSA Group dealer. Used products traded from person to person, or through an unauthorized dealer, will not retain warranty coverage.

This warranty is only valid within the United States, its territories, and Canada and does not apply to products purchased elsewhere. Outside of the United States, its territories, and Canada, please contact an authorized LSA Group distributor for warranty and service information.

This warranty is considered void if a defect, malfunction or failure of the product or any component part was caused by abuse while in the possession of the customer, tampering by persons other than factory-authorized service personnel, or failure to comply with the LSA Group's operating instructions.

Any implied warranties relating to LSA Group products shall be limited to the duration of this warranty. This warranty does not extend to any incidental or consequential costs or damages to the purchaser. Freight is not covered under warranty. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.



Statement INTEGRATED AMPLIFIER

Nashville, TN · USA · www.thelsagroup.com · info@thelsagroup.com